


Autorun Transition Document

The Autorun menu is no longer delivered as part of the PADS Flow installation. This document provides information on how to access the same programs or information as part of the redesigned PADS Flow installation (or from other locations).

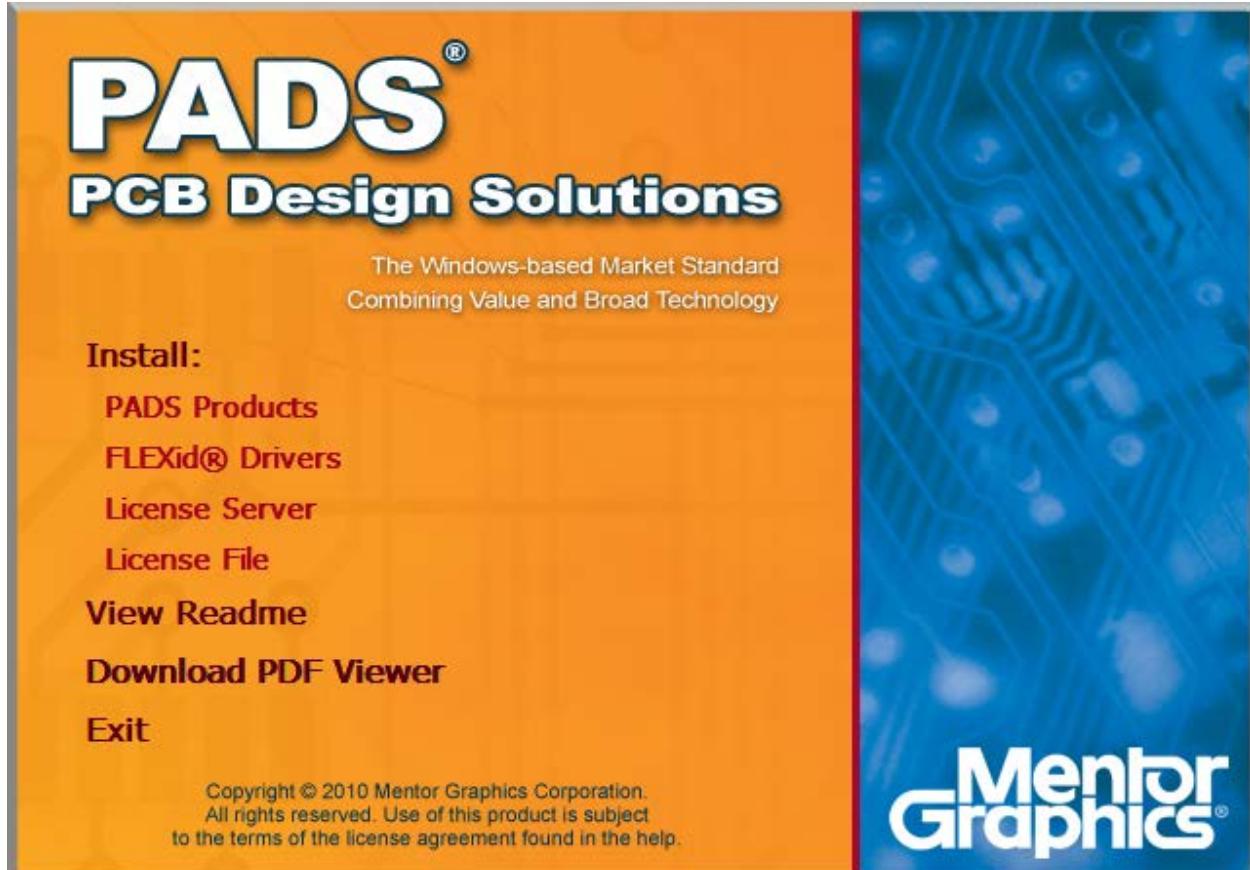


FLEXid® Drivers

The dongle drivers are now installed as part of the licensing installation. They can also be loaded manually after the installation via the Start Menu, at:

Start menu > Programs > Mentor Graphics SDD > PADS Licensing Assistance > Test and Install Hardware Key Drivers

License Server

The license server software (PCLS) is now loaded from the product selection area (click “Modify” on the “Confirm Installation Choices” dialog). It is the “License Server” entry under the “Server Services” heading. See following screen-shot:

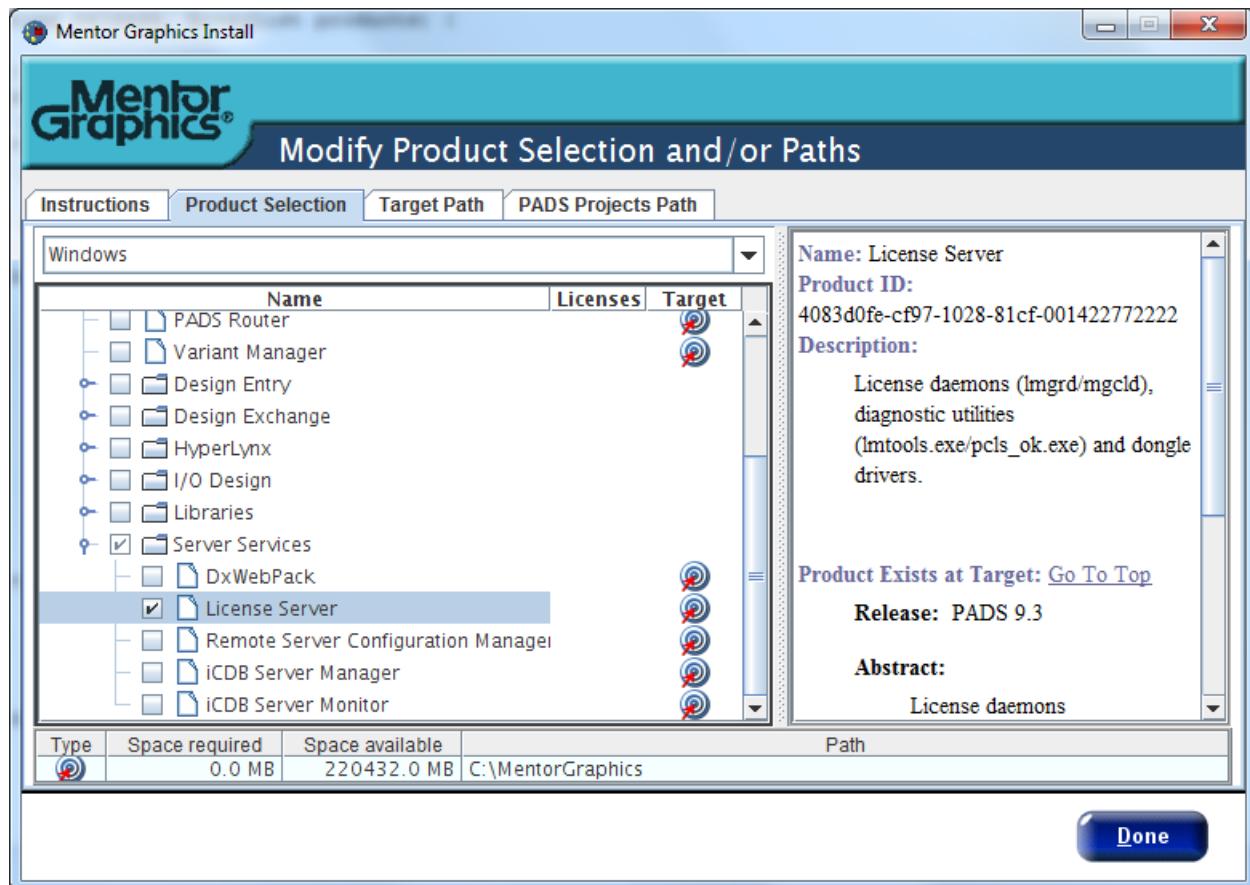

License File

This functionality is available during the installation, and after the installation at the following Start Menu location:

Start menu > Programs > Mentor Graphics SDD > PADS Licensing Assistance > Install License File

Download PDF Viewer

The Adobe PDF Reader can be downloaded from the Adobe web-site at:

<http://get.adobe.com/reader/>